Manufacturing manual for double display overvoltage/undervoltage/overcurrent reclosure Model AVP-100/80/63/50/40/32/25/20/16





# Wiring diagram



#### function

Overvoltage and current protection

under voltage protection

Overcurrent protection

Automatic reclosing

Voltage/current display

Adjustable voltage, current tripping, and automatic reclosing time

OUTPUT

#### Function

- ★ Overvoltage protection/shut down
- ★ Undervoltage protection/shut down
- ★ Overcurrent protection/shut down

★ Continuous overcurrent counting/shut	down
--	------

★ Wide voltage	Overvoltage 130-300%, undervoltage 80-210%. It is always under protection upon incorrect setting, and fault lamp is on
★ Rapid protection against power failure	Abnormal ignition of front-end power grid, power failure, and other protector actions
★ Manual/automatic recovery	After manual protection turns off the output, it must be turned on manually.
★ Knife function	When the protection function is turned off, the relay remains as it is and no longer acts, but the switch button is still active
★ Multi-mode display	Voltage, current, frequency, visual power, etc. are switched according to mode
★ Setup lock	Prevent the parameters from being modified by mistake, which can not achieve the purpose of protection
★DC mode	When DC is used, current/power is invalid
★ Energy saving mode	Reduce the brightness of digital tube to save energy when the protector is not active
★ Embedded RTOS	The system performance and stability are improved and the system has high maintainability

## Parameter

★ Effective voltage range	AC 80~300	v	1%	Can be calibrated and have higher accuracy
★ Effective current range	AC 0.1~63.0	A	1%	Can be calibrated and have higher accuracy
★ Frequency range	40~70	Hz	196	Can be calibrated and have higher accuracy
★ Screen refresh rate	>1000	Hz		
★ Table update	0.1~1.0	S	196	Screen value update
★ Table algorithm	Root mean square/RMS			This algorithm should be used in mains power grid
★ Overvoltage and undervoltage backlash	5	v		Fixed 5V backlash
★ Timerrange	1~999	S	196	User settings
★ Action time	0.1~10.0	s	196	User settings
★ Effective DC range	DC 80~300	V	1%	

## Setting

No.	Option code	Option	max	min	Default	Step	Unit	Description
Ρ1	Pt	Power-on delay	999	1	5	1/10	s	
P2	rt	Recovery delay	999	1	30	1/10	s	
P3	٥U	Overvoltage	300	130	270	1/10	v	Close overvoltage if greater than 300
Ρ4	oUr	Overvoltage recovery value	295	125	265	1/10	v	Skip this setting when overvoltage is turned off
Ρ5	uU	Undervoltage	210	80	170	1/10	v	Close undervoltage if below 80
P6	uUr	Undervoltage recovery value	215	85	175	1/10	v	Skip this setting when undervoltage is turned off
Ρ7	Utt	Overvoltage action delay	10.0	0.1	0.5	0.1/1.0	s	
P8	UAd	Voltage correction	+10%	-10%	0	0.5%	v	Long press setting is not recommended
Ρ9	٥C	Overcurrent	63.0	1.0	63.0	0.1/1.0	А	Close overcurrent if greater than 63.0
P10	Ctt	Overflow as delay	10.0	0.1	1.0	0.1/1.0	s	
P11	сс	Continuous overcurrent counting	20	0	0	1	Times	0: Turn off counting
P12	CAd	Current correction	+10%	-10%	0	0.5%	Α	Long press setting is not recommended
P13	FAd	Frequency correction	+2.5%	-2.5%	0	0.1%	Hz	Modifying this value will affect the accuracy of the timer
P14	FPd	Rapid power failure protection	on	off	on		MS	
P15	dS	Display mode	3	1	1	1		1: Standards
								2: Manual switch
								3: Automatic switch
P16	Ar	Automatic reset	on	off	on			on: Self-recovery
								off: Manual recovery
P17	Act	Action/knife mode	on	off	on			on: Protector working properly
								off: knife mode
P18	EC	Energy saving mode	on	off	off			on: Open
								off: Close
P19	Loc	Setup lock password	999	000	112	1/10		When this value is not 112, you can only view the parameter and cannot set it





### Other Operation

Function	Description
Reset	In shutdown mode, press the power key for more than 5S to reset all parameters and start up
Toggle display	Display Mode 2: +,-Key Switch
	Display Mode 3: +,-Key Switch
Turn on/off	Short press the power key for operation
Quick voltage adjustment	In the boot state, click the '+' key quickly
Quick current adjustment	In the boot state, click the '-' key quickly
Setting error	When the overvoltage is set below the undervoltage, the protector will always be in the protection state
Reference of calibration table	When correcting the voltage/current, the adjustment must be made with reference to the multimeter with root mean square (RMS)
Modify the setup lock password	Reservation
4	

#### Poweron

Function	Description	
Power-on self-test	Turn on the digital tube to display 888, and the LED indicator lights up for 1 second	
Status display	The first bit of the upper digital tube displays the overvoltage protection status' y ': turn on the overvoltage protection'-': turn off the overvoltage protection	
	The second bit of the upper digital tube shows the undervoltage protection status' y ': turn on undervoltage protection - ': turn off undervoltage protection	
	The third bit of the upper digital tube displays the overcurrent protection status' y ': turn on the overcurrent protection'-': turn off the overcurrent protection	
	The lower digital tube displays the frequency of the current power supply 50H/60H/dC	
	Knife function, skipping status display	
	Automatic reset off, skipping status display	
	The status display is constrained by the power-on delay which is greater than 3 seconds, and then the remaining power-on time is displayed	