




## Extension Cables

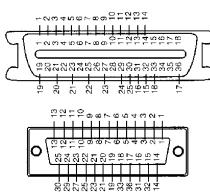


**ZR01MM /FM**  
IBM PRINTER CABLE (6ft)  
MM : DB25M - CEN36M  
FM : DB25F - CEN36M




 
**ZR07MF**  
MONITOR EXTENSION CABLE (6ft)  
MF : DB09M - DB09F  
FF : DB09F - DB09F

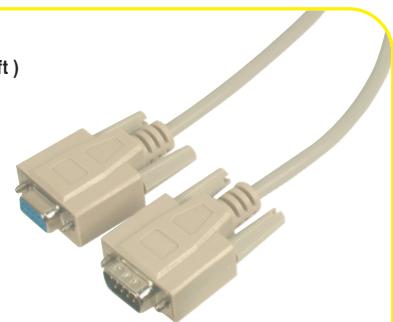



**ZR02MM /MF /FF**  
RS232 EXTENSION CABLE (6ft)  
MM : DB25M - DB25M  
MF : DB25M - DB25F  
FF : DB25F - DB25F

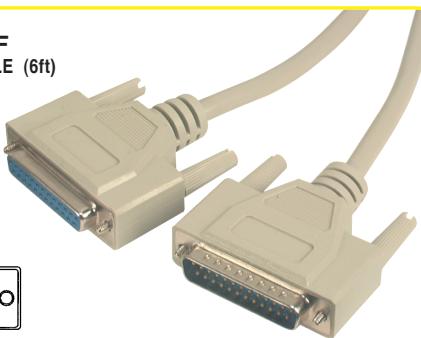



**ZR07000**  
USB A TYPE PLUG TO A TYPE PLUG CABLE (6ft)

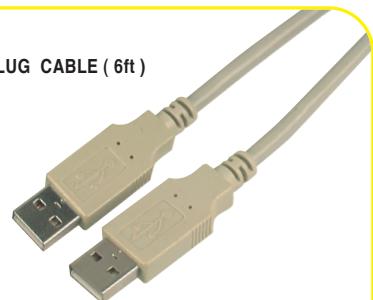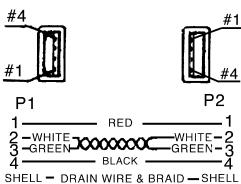



**ZR04MF**  
SERIAL MODEM CABLE (6ft)  
MF : DB25M - DB09F

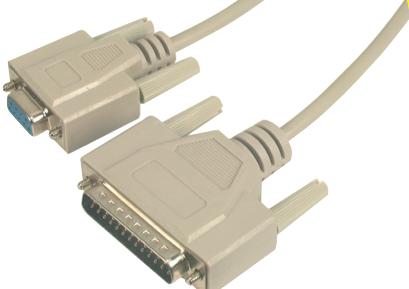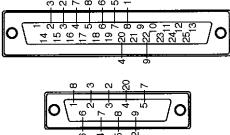


**ZR07005**  
USB A TYPE PLUG TO B TYPE PLUG CABLE (6ft)

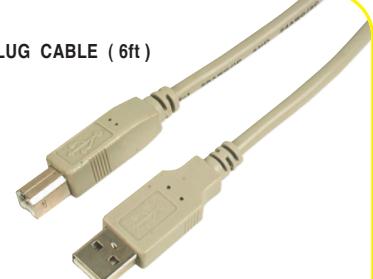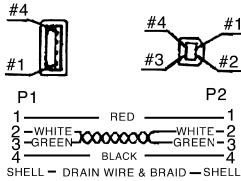


**ZR0611**  
KEYBOARD EXTENSION CABLE (6ft)  
MINI 6P PLUG TO MINI 6P JACK

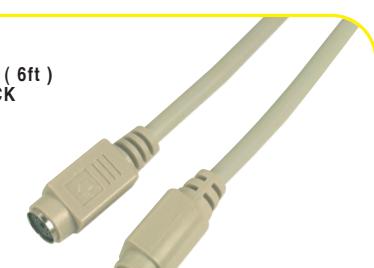 

**ZR07008**  
USB A TYPE PLUG TO IEEE 1284 CABLE (6ft)

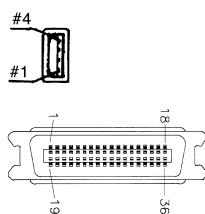

**ZR062**  
KEYBOARD CABLE (15cm)  
5P JACK TO MINI 6P PLUG

 

**ZR07010**  
IEEE 1394 6P PLUG TO 6P PLUG CABLE (6ft)

