

## ADP2 PUSHBUTTON, BOX & PILOT LIGHT



### Pilot lights

AD16-22/25D/S	21-DC.AC6V	R-Red	
	22-DC.AC12V	RH-High Red	
	23-DC.AC24V	G-Green	
	24-DC.AC36V	GH-Pure Green	
	25-DC.AC48V	Y-Yellow	
	26-DC.AC110V	YH-High Yellow	
	27-DC.AC127V	B-Blue	
	31-AC220V	BH-Pure Blue	
AD16B-22/25M/K	32-AC380V	W-White	
	23-DC.AC24V	WH-Pure White	
	24-DC.AC36V	K-Black	
	25-DC.AC48V		
	26-DC.AC110V		
	27-DC.AC127V		
	31-AC220V		
	32-AC380V		
AD16B-22/25M/r	23-DC.AC24V	R-Red	
	24-DC.AC36V	The buzzer's voice interrupted	
	25-DC.AC48V	flashlight volume is 10cm/80	
	26-DC.AC110V	Decibel, electric current is	
	27-DC.AC127V	15-20mA	
	31-AC220V		
	32-AC380V		

### Push buttons

Description	Scheme	Contact type	Diameter	Colour	Reference
Contact Block		N/O			BE 101
		N/C			BE 102
Flush Button		N/O		K-Black	ADP2-BA21
		N/C		G-Green	ADP2-BA31
Mushroom Head		N/C		Y-Yellow	ADP2-BA51
		N/C	40	BL-Blue	ADP2-BA61
				R-Red	ADP2-BA42
			60	R-Red	ADP2-BC42
				R-Red	ADP2-BR42

### Latching mushroom head emergency stop pushbuttons

Description	Scheme	Contact type	Diameter	Colour	Reference
Push-pull Reset		N/C	40		ADP2-BT42
		N/C	30		ADP2-BS442
Return reset		N/C	40		ADP2-BS542
		N/C	60		ADP2-BS642
		N/C	40		ADP2-BS142

### Selector switches

Description	Scheme	Contact type	Operator handle	Reference
2 Positions stay out		N/O	Standard	ADP2-BD21
			Long	ADP2-BJ21
2 Positions, spring return from right to left		N/O	Standard	ADP2-BD41
			Long	ADP2-BJ41
2 Positions, spring return from right to left		N/O+N/C	Standard	ADP2-BD45
			Long	ADP2-BJ45
3 Positions stay out		N/O+N/O	Standard	ADP2-BD33
			Long	ADP2-BJ33
3 Positions 2 spring return		N/O+N/O	Standard	ADP2-BD53
			Long	ADP2-BJ53

### Key operated selector switch (key number 455)

Description	Contact type	Key position removal	Reference
2 Positions stay out	N/O	left	ADP2-BG21
	N/O+N/C	left	ADP2-BG25
2 Positions	N/O	left	ADP2-BG61
	N/O+N/C	left	ADP2-BG65
3 Positions stay out	N/O+N/O	center	ADP2-BG33
	N/O+N/O	center	ADP2-BG53