For **K36400 K36411 K36414**

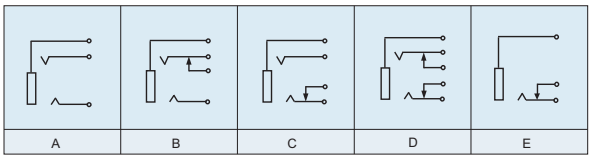

K36400A /B /C /D /E
2.5mm Phone jack (SMD)



K36402A /B
2.5mm Stereo phone jack (SMD)

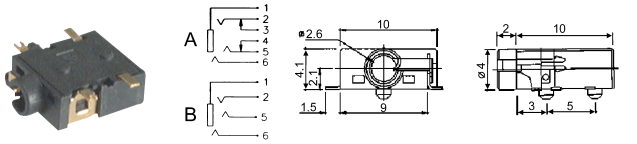

K36404A /C /E
2.5mm Phone jack (SMD)

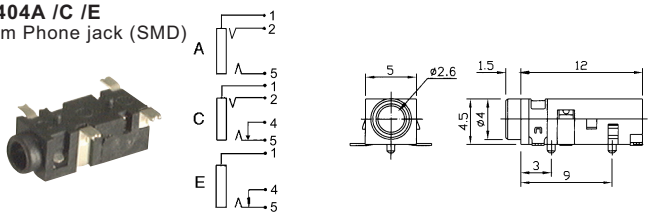

K36406
3.5mm Stereo phone jack (SMD)

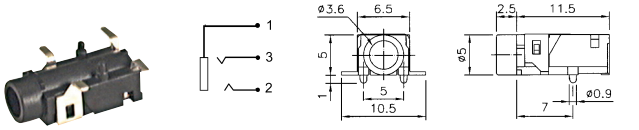

K36411A /B /C /D /E
3.5mm Phone jack (SMD)



K36414A /C /D /E
3.5mm Phone jack (SMD)

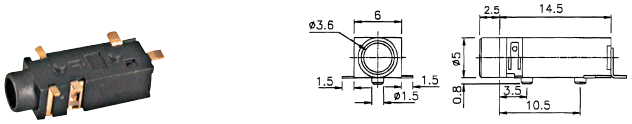

K36416
3.5mm Stereo phone jack (SMD)

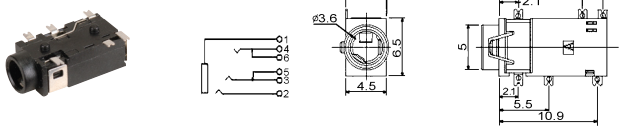

K36420
3.5mm Stereo phone jack (SMD)



K36430
2.5mm 3Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

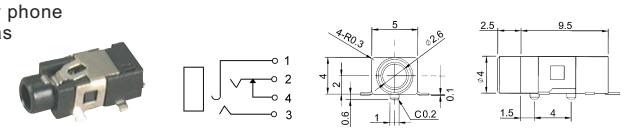

K36432
2.5mm 3Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

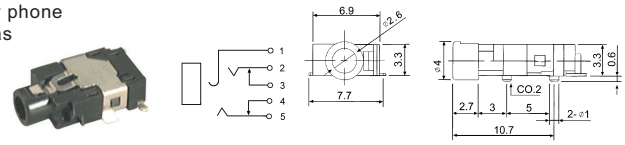

K36434
2.5mm 4Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

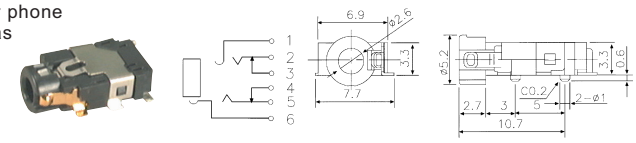

K36436
2.5mm 5Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

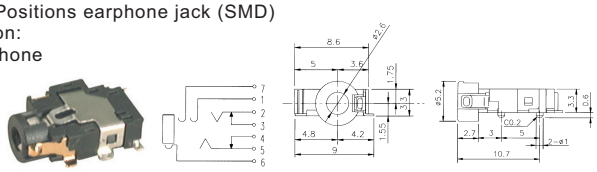

K36438
2.5mm 6Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

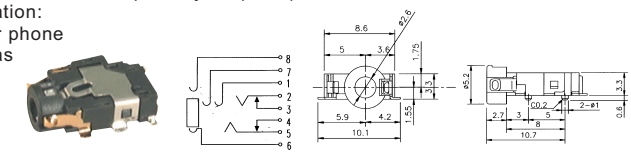

K36440
2.5mm 7Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

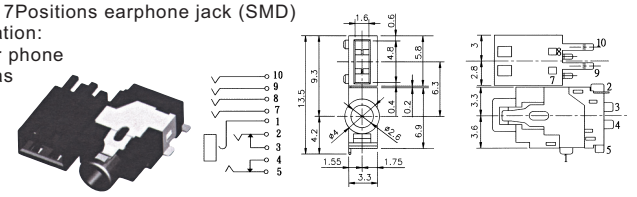

K36442
2.5mm 8Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3

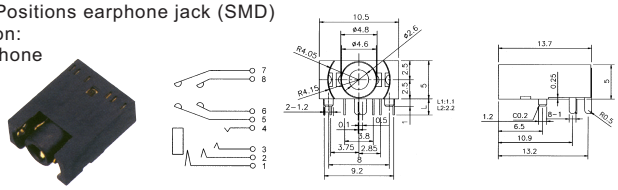
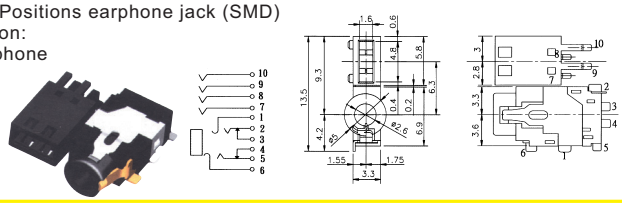
K36446
2.5mm 8Positions earphone jack (SMD)
Application:
cellular phone
cameras
PDA
MP3